


Honda CRV on electric suction V4.6 installation instructions



1. Remove the original car plate and the original car poles, someone must be in the middle note down when the poles to hold the car door

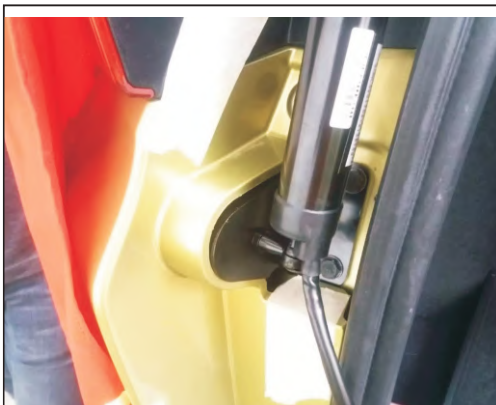

2. Remove the original car bottom bracket, installation is special, bottom bracket, screws with the original car




3. In the original car ball head installed our poles (or steps)



4. Remove the original car right bracket, installation special bracket at the lower right, with the original screw fixation




5. Remove the left and right side lights, poles wire line

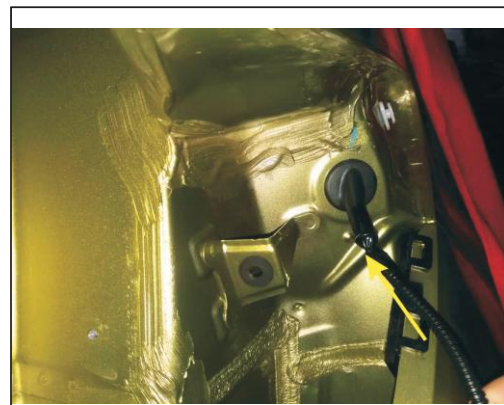

6. Remove the lamp after the original open a car hose, go with the original vehicle wiring harness line poles



7. Line poles from the lamp go through the waterproof glue plug door cover plate in line to end

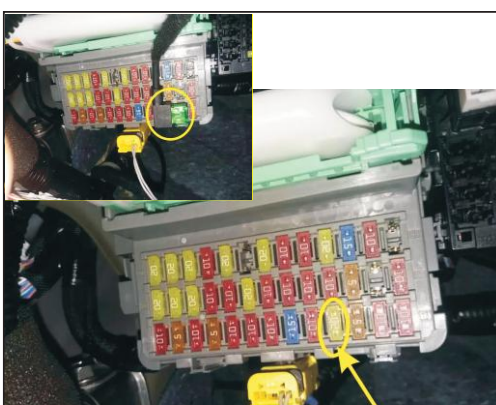

8. Below the main driving remove the plaque, found the power and unplug the original car 20 a fuse, plug in our power plug



9. In the main driving power on the left side, find the grounding screw, connecting the ground wire



Remove the original car keys

10. Remove the main drive below the original key, install before we switch button




11. In the main drive belt B column, find the original car central control




12. Remove the original car socket, we yellow Central Line after the seat white line (from right to left for the first row of the second hole)



13. Leave the power cord, Central Line through the original car waterproof glue plug door line to end

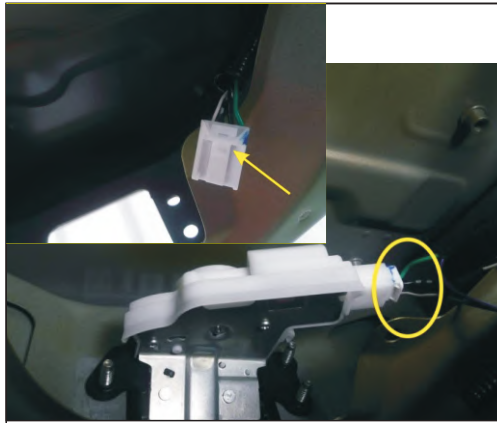

14. Unplug the seat in the car door lock, insert our tee socket on the seat

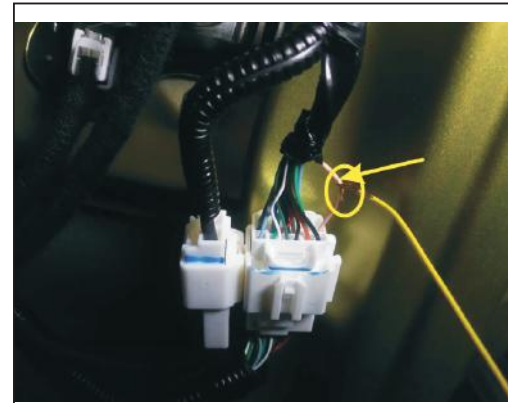


15. Find the original driving car door key, remove the seat on the back of the car, switch out in front of a line by pink line (from left to right the second row of the last hole)




16. Switch to another line before pick up the screws




17. Abort the original screw, remove the original car lock, installed on our electric absorption, use the original car screws

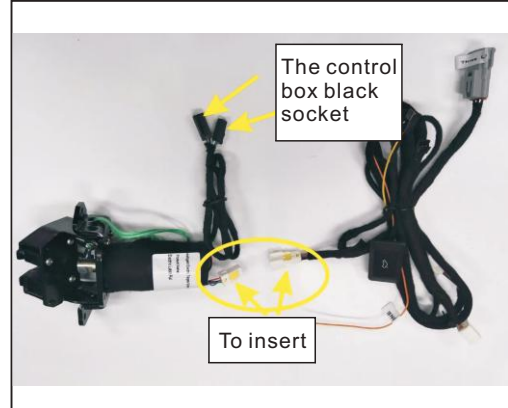

18. Plug as shown in our company electric socket

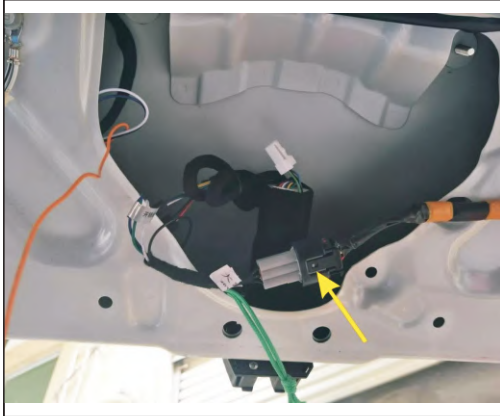


19. At the tail door locks will remove the black socket, to plug our tee socket

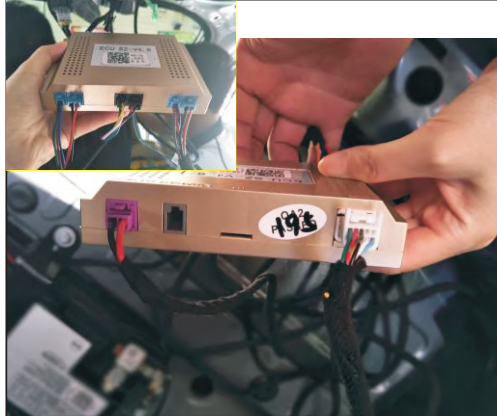

20. Put the hole line, power line, electric line socket according to color a pair of control box



21. Control box installed in the tail gate, with our control box stickers at the back, with a special screw, spring, washer

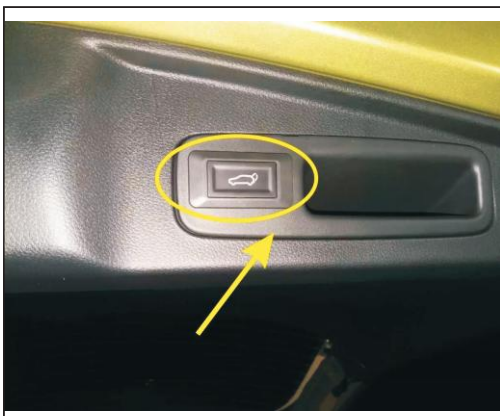

22. Remove the original car armrest plaques, in the original car trim stiletto installation we stern door keys